



This setout is provided as a guide only. It is the responsibility of the concreter/erector to confirm that all dimensions are correct.

### Right Side

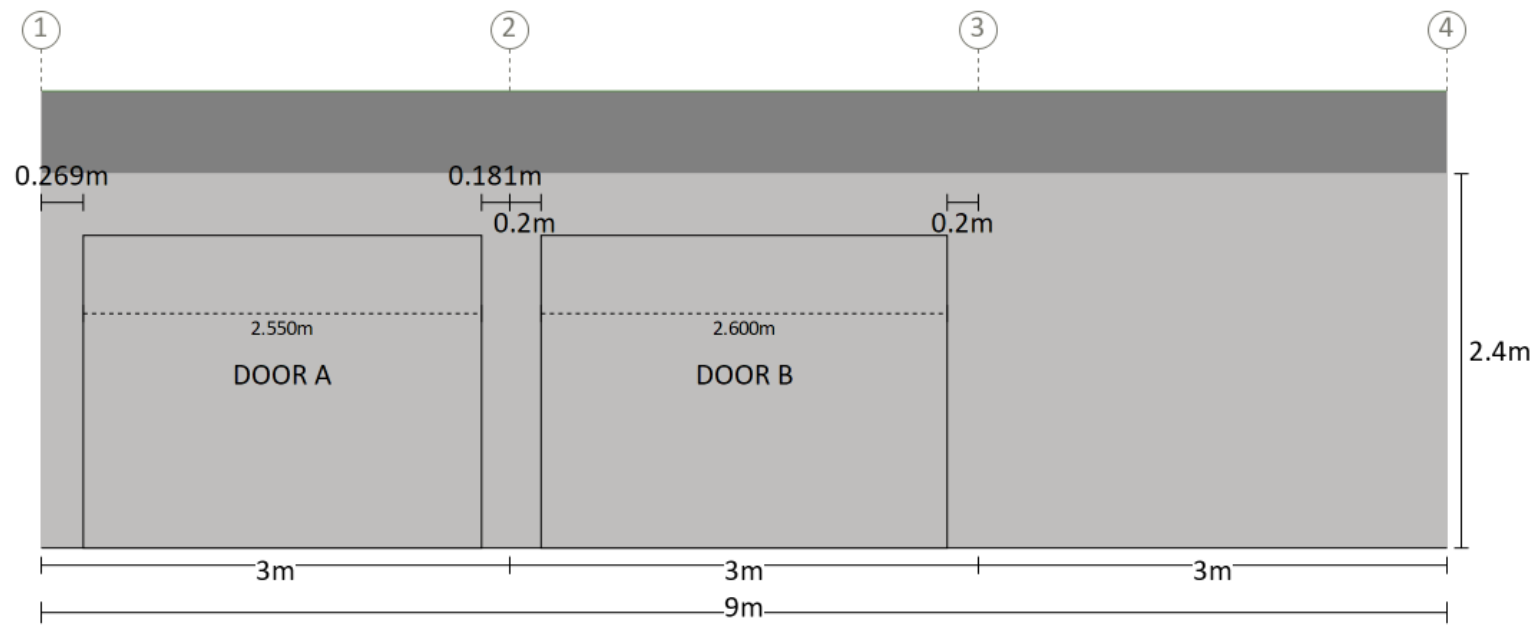

Measurements are from the outside of end girts (end bays) and/or centre of columns (mid bays) to inside of component opening size.

### Right End

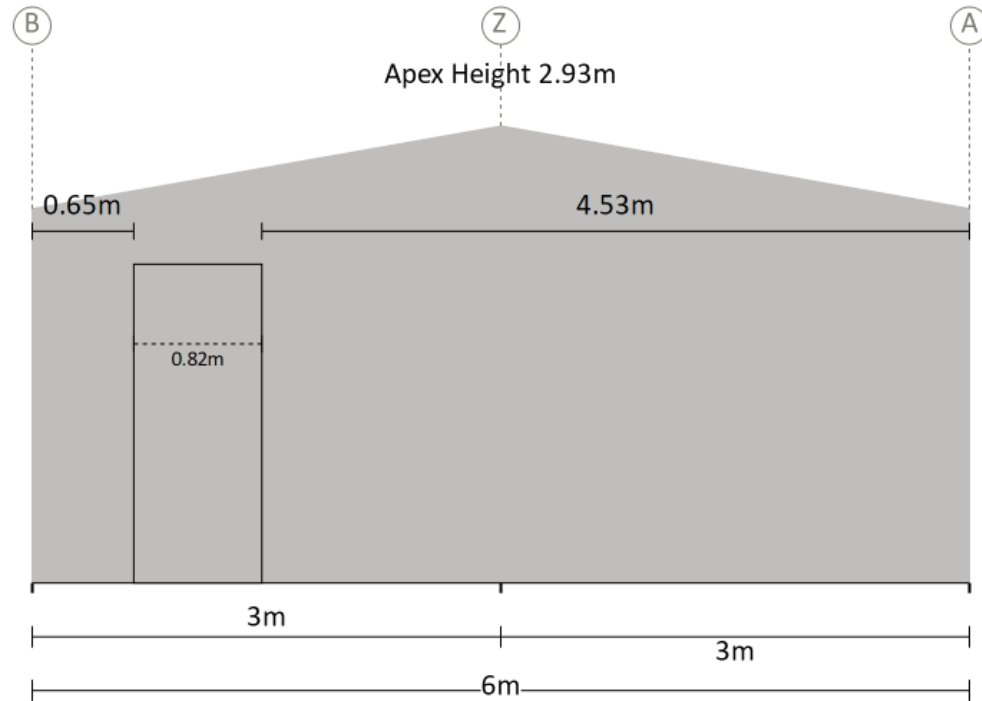

Measurements are from the outside of side girts to the inside of component opening size.

Purchaser Name: [REDACTED]

Site Address: [REDACTED]

Drawing # GCOLLINS2407006

Print Date: 09/07/24

### Component Position

Not to Scale  
Page 1 of 1  
© Copyright Steelx IP Pty Ltd

